



# Assembly Instruction for Wrought Iron Cage # 509

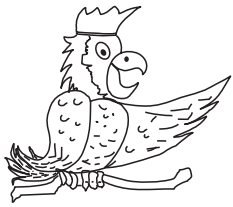

# Kings Cages L.P.


Manufacturers of Quality Knock Down Wrought Iron Bird Cages  
375 Old Bridge Turnpike, East Brunswick, NJ 08816  
Tel.: (732) 698-9800 Fax.: (732) 698-9806

1)

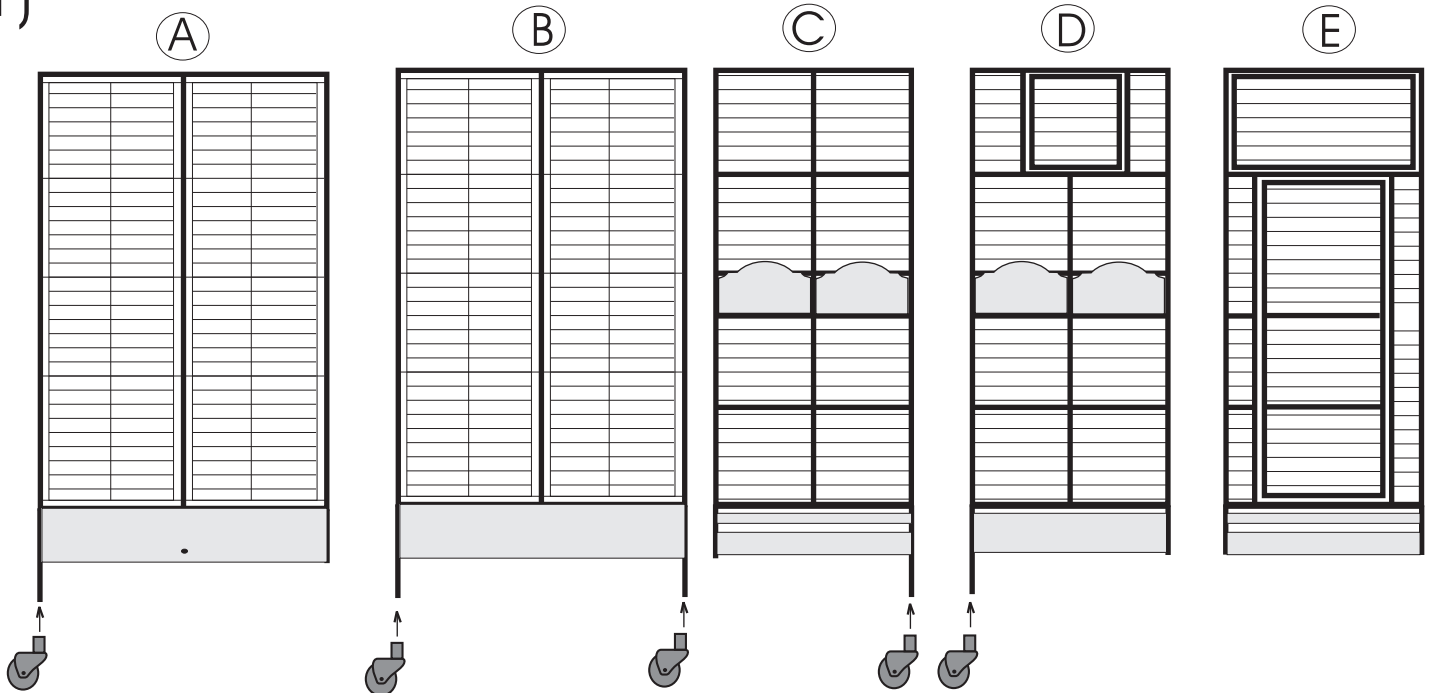


2)

Screw upright with back panels  
by using bolts

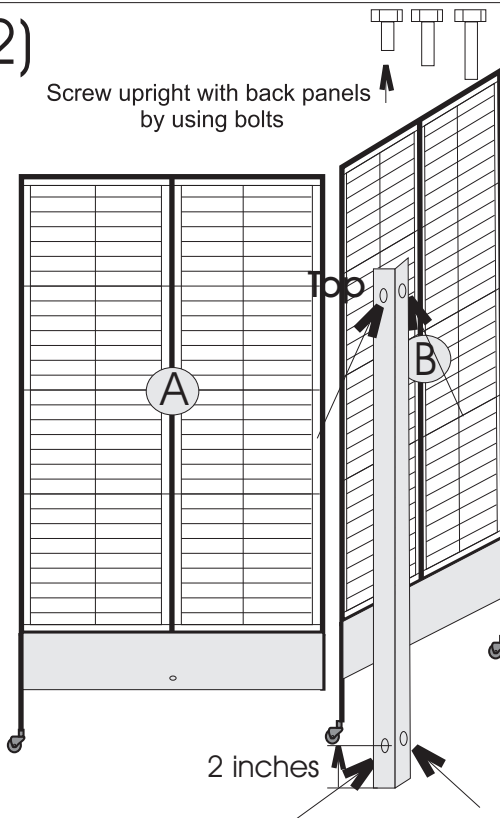



3)

Screw panels C & D together with back panels  
by using 6 screws.

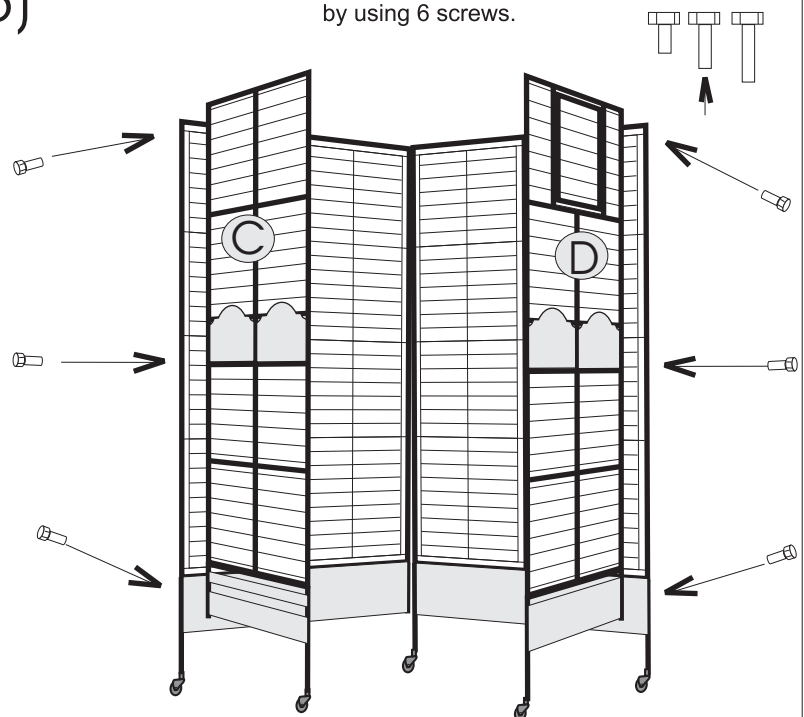


4)

Use four bolts to screw frame F with panels.

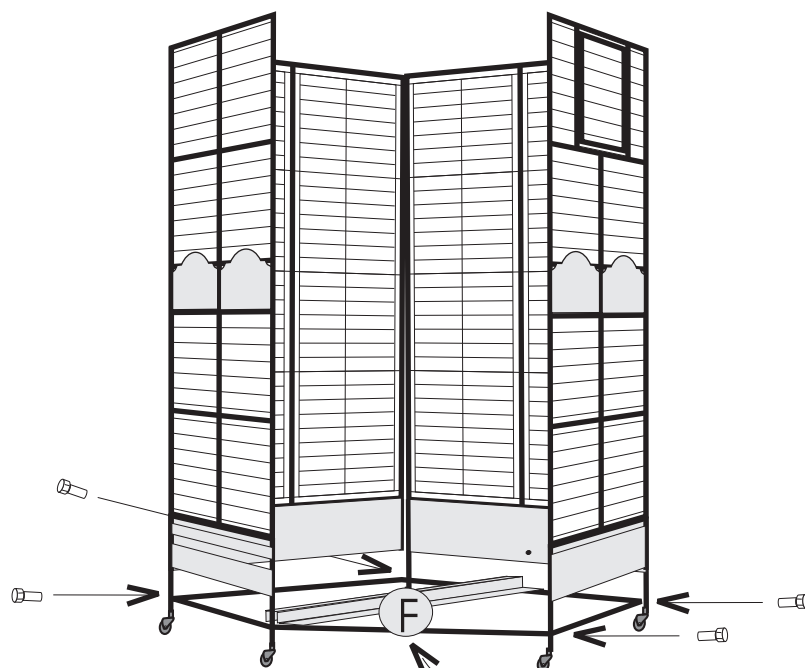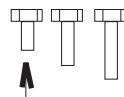


Frame F

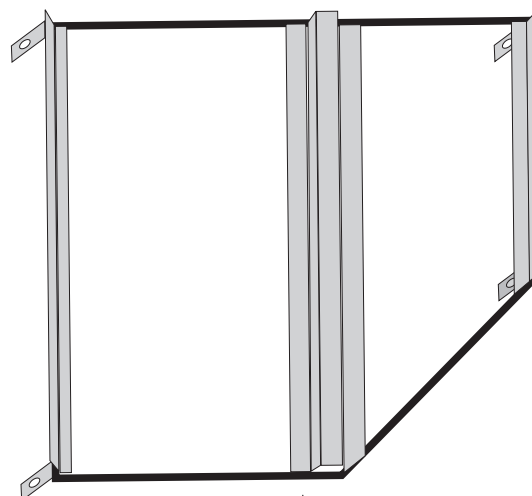


5)

Middle partition G insert into the hole and the opposite end screw as shown in Fig.


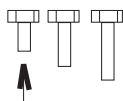


G

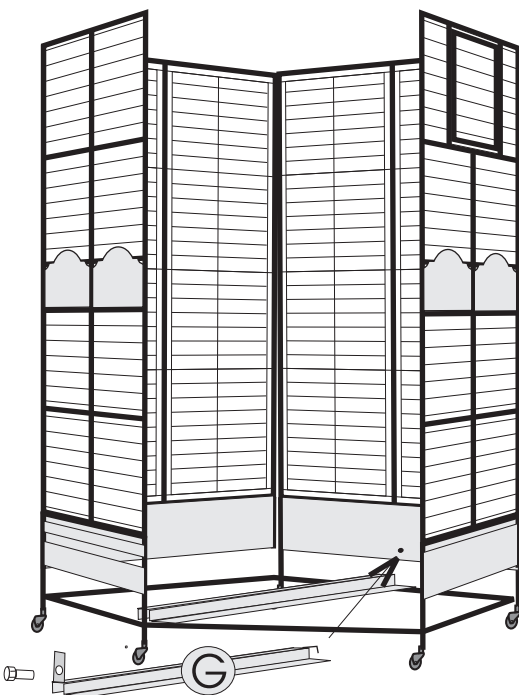


6)

Screw two uprights with front panel by using six bolts.

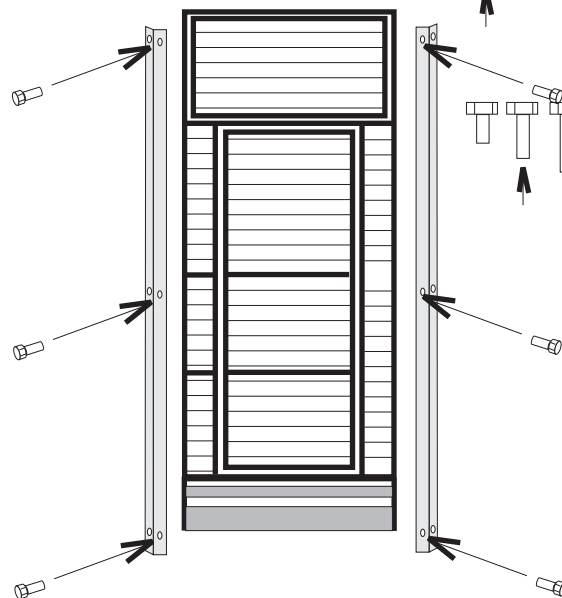
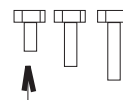


Then another six bolts use for connecting front panel and side panels.



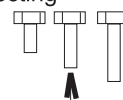


7)


Top roof screw with panels by using 5 bolts.

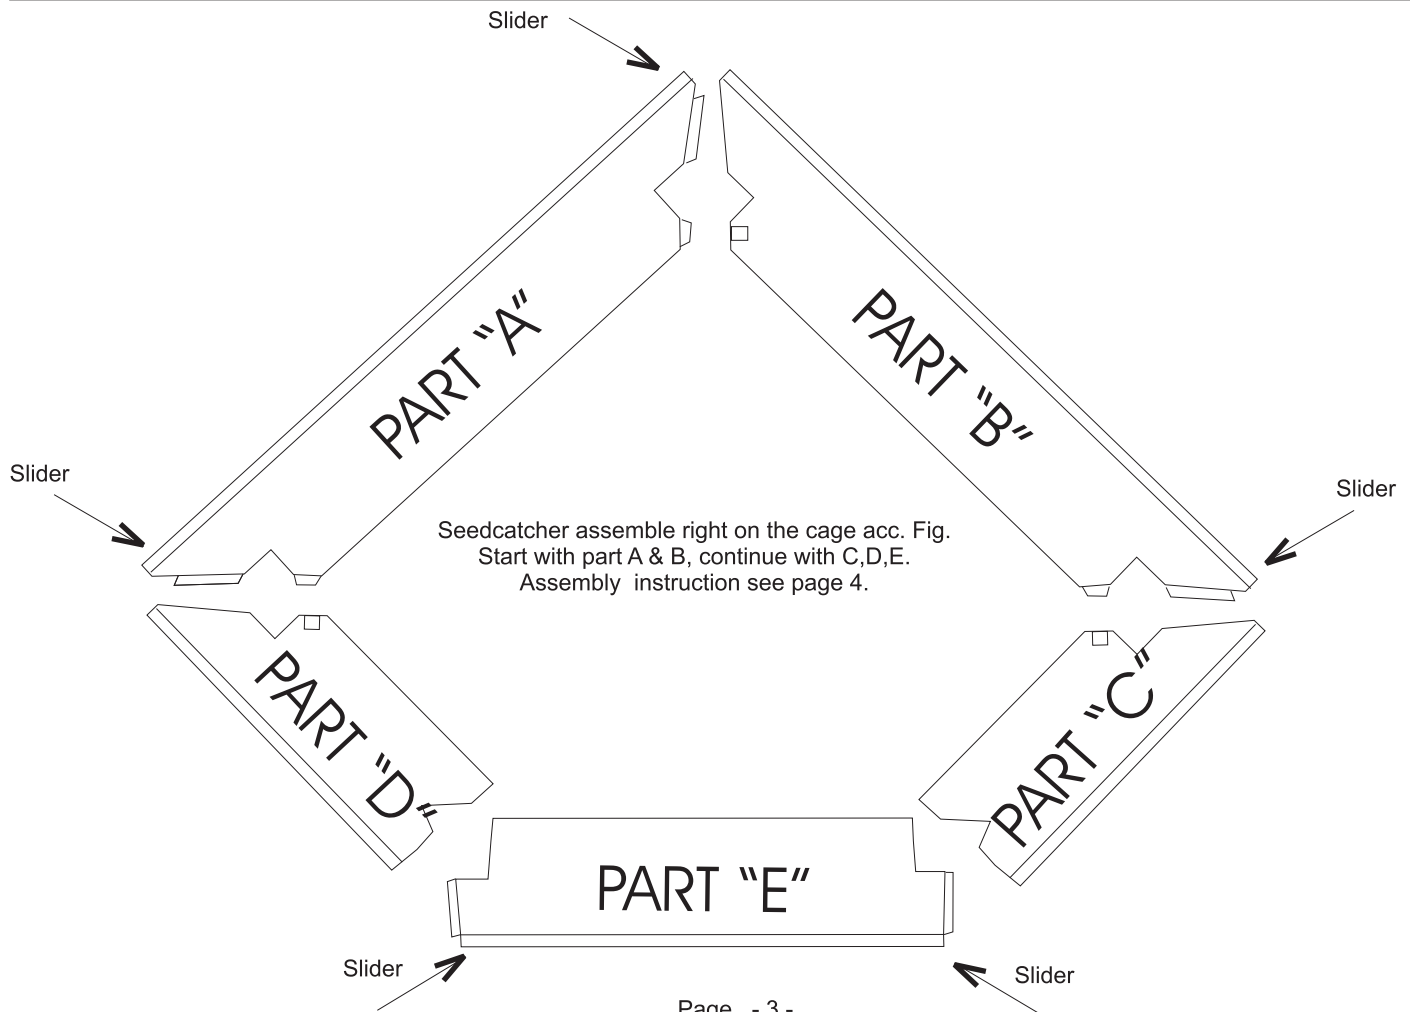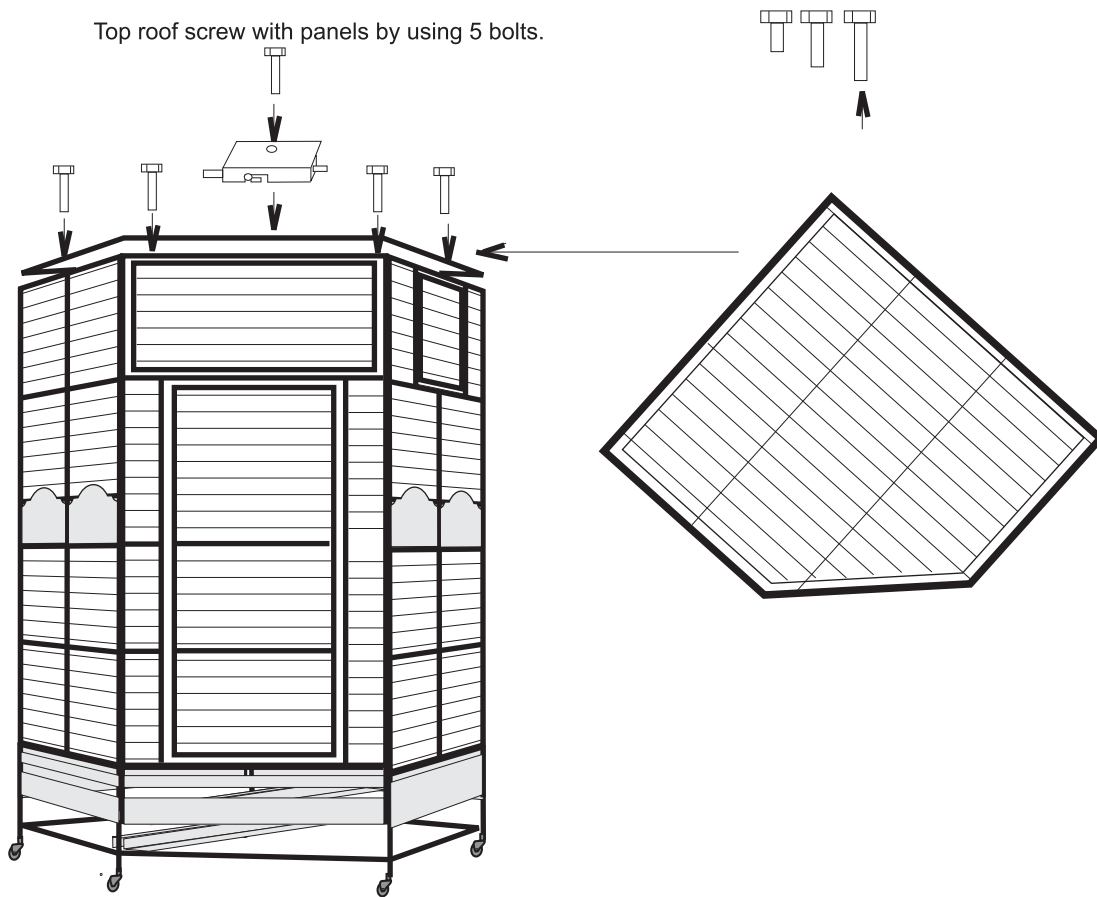

## Assembly Instruction for Seed catcher

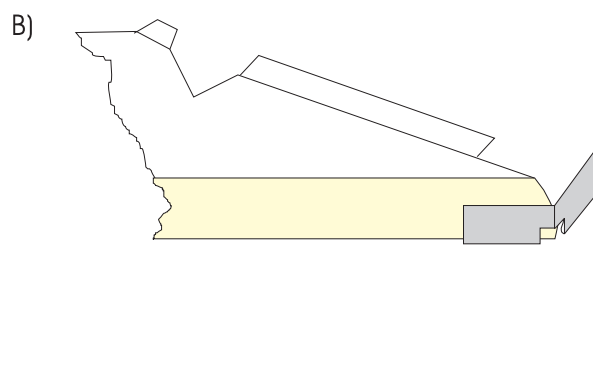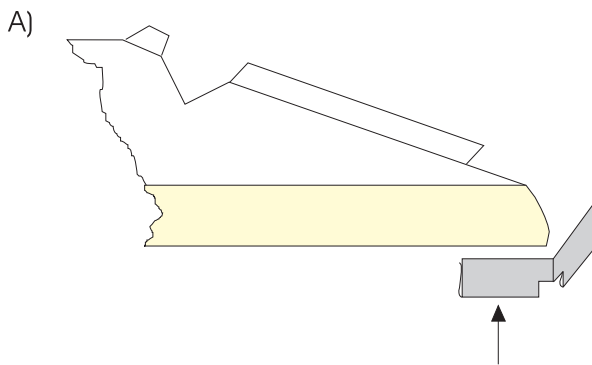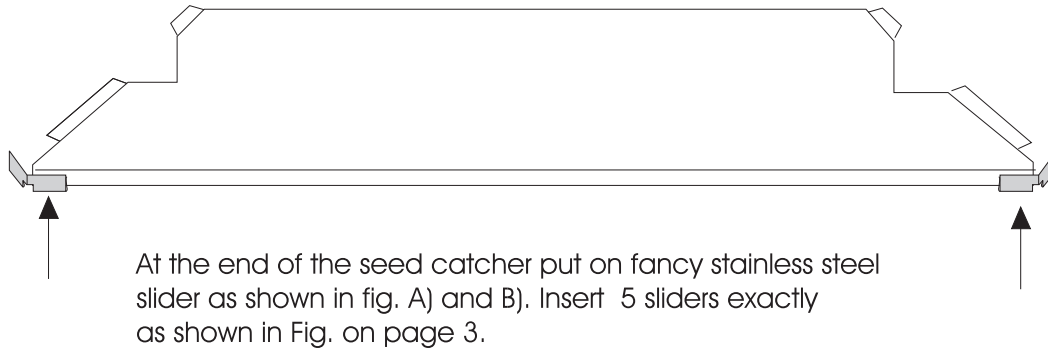

All 5 corners assemble the same way

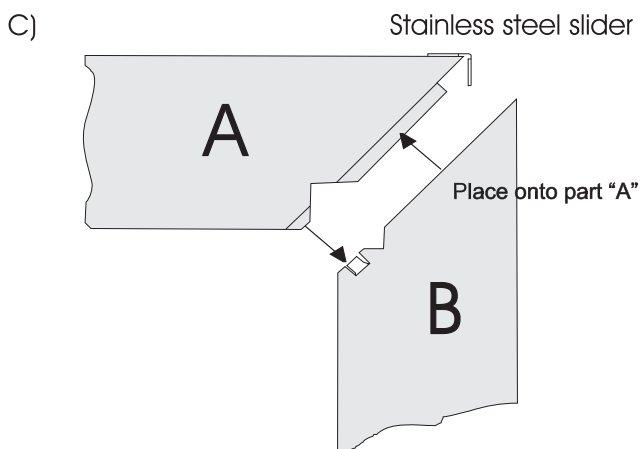

D) Put on the slider upwards to fix the corner and push part A and B together.

